 

## Centrifugal Pump Maintenance Winterization and Spring Start-Up

## WINTERIZATION

- 1. Turn off lawn controller and source water valve break suction vacuum.
- 2. If feasible, disconnect water source and discharge piping.
- 3. On pump case, open both top and bottom drain valves to remove water from pump chambers.
- 4. If blowing out irrigation system with pressurized air, use a narrow box wrench (dia. 1) to prevent the shaft from spinning. When impeller spins too fast, motor governor can be damaged.
- 5. Once water is drained from pump case, close drain valves.
- 6. Fill pump case just past the eye of the impeller, with Munro Freeze Defeat\* pump winterization fluid. The Munro Freeze Defeat will keep cast iron pump cases from rusting and keep the impeller free for spring start-up.



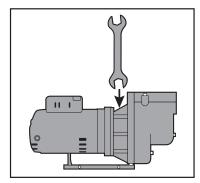

dia. 1



## **SPRING STARTUP**

- 1. Drain and save the Munro Freeze Defeat for next year.
- 2. Close top and bottom drain valves.
- 3. Reconnect water source and discharge piping.
- 4. Turn on lawn controller and source water valve.
- If issues arise, refer to your owner's manual or the Munro Troubleshooting Guide for Centrifugal Pumps and Controls (www.munropump.com/resources#tips-troubleshooting)

